

PRODUCT MANUAL & FITTING GUIDE



tow pro

EACH TOW PRO COMES WITH THE FOLLOWING:

- QUICK ZIP SYSTEM to aid fitting
- 2 CLEAR EYES for caravan lights
- ELASTIC WINGS to aid cover tension
- Storage bag
- 1 Year manufacturing warranty

FEATURES & BENEFITS OF THE TOW PRO:

- 100% waterproof & breathable fabric
- **-** UV protected fabric
- Protects from stone chips & cracked windows
- Prevents road dirt & exhaust fume debris build up
- Protects from insect residue
- UK manufacture & support

TYPE: TAILORED FIT

IMPORTANT: CARE INSTRUCTIONS





PRODUCT MANUAL & FITTING GUIDE

BEFORE FITTING YOUR COVER PLEASE NOTE

Take a moment to familiarise yourself with the product.

- The cover does require two awning channels and an opening on both sides to fit the cover.
- When fitting your Tow Pro the front of the caravan must be clean.
- On the offside of the cover undo the full height zip to the bottom.
- Insert the off side awning tape in the channel first from the bottom and work your way up to the top.
- Please note; If your caravan does not have a bottom awning access, your cover should be fitted from the top and worked down the awning channel.
- Two person fitting is recommended but the product has been designed so it can be fitted by one person.
- It is important to remember the cover is held on through the awning channels and clips, no further adhesion materials or methods are necessary.
- To keep your Tow Pro clean, sponge down with mild soapy water
- If your caravan does not have an awning stopper built in we will supply them with the cover. These need to be fitted into the channel at the base where the cover naturally finishes.

IMPORTANT NOTICE

The caravan front must always be clean and free from dirt/grit and other road debris before fitting any Tow Pro product, if this is not done properly damage may be caused through abrasion to the caravan front from trapped dirt between the cover and caravan

PLEASE NOTE

The Tow Pro cover range is designed specifically to protect your caravan whilst being towed. It is **NOT** intended to be used as a storage cover or to be left affixed to the caravan whilst it is being stored. Please remove this cover once you have reached your destination.



On a number of Coachman caravans there is an additional fixing point. The large flap located at the top of the cover hooks over the Coachman sign located above the front window. Please see image of how the cover should be fitted This is not standard on all Coachman covers. If you are unsure of how this section is fitted please contact our customer service team.



STEP 1

Place the Tow Pro across the front of your caravan sitting across the A-frame. On the offside of the cover undo the full height zip to the bottom. Slowly begin to slide the awning tape up the channel until the full length is fitted.



STEP 2

Walk around to the near side of the caravan and from the bottom feed the awning tape into the channel feeding it to the top. Walk back to the offside and zip up the open section. Ensure the cut away A-frame section sits neatly over the A-frame.



STEP 3

Ensure that the cover sits straight and adjust accordingly so that the caravan's lights are clearly visible through the Clear Eyes. If required ensure the awning stoppers have been fitted at this point.



STEP 4

Once the cover is in the correct position, pull the Quick Fit Clips under the front of the caravan and secure in place.



STEP 5

The elasticated Quick Fit Clips are designed to clip under the lip of the caravan as shown, and are designed to create tension and prevent dirt getting underneath the cover.



STEP 6

Once all the clips are firmly in place, pass the A-frame strap under the A-frame and above the brake cable.



STEP 7

It is extremely important that when fastening the A-frame strap that it is passed OVER the brake cable. This ensures that it doesn't affect the safety of the vehicles when towing.



STEP8

Once the strap is safely in place over the A-frame, simply fasten the top buckles and adjust, be careful not to over tighten the straps. Place excess webbing through slides. You are now ready to tow!



STEP 1

To remove the cover, unfasten the A-frame strap and unclip all the Quick Fit Clips from under the caravan's valance. Undo the full height zip on the offside and remove the awning tape from the channel. Then zip this section back up once detached from the caravan.



STEP 2

Walk round to the near side and slide the awning tape out of the channel fully. The cover should now be free of the caravan.



STEP 3

Once the cover is completely removed hold it out straight or lay across the front of the caravan and fold. Ensure that the fleecy inner is on the outside and that the cover doesn't touch the floor to prevent any dirt coming into contact with it.

NEED HELP? CALL OUR EXPERTS FOR ASSISTANCE

Office hours: Mon - Fri 9am - 5pm, Sat - Sun CLOSED



STEP 4

When folding ensure that the fleecy inner of the fabric is on the outside again to prevent any transfer of dirt from the outside of the cover. The cover can now be placed back into its storage bag ready for your next trip.